

AUKEY


User Manual 2 x 2 USB Wall Outlet 2-Pack

Thank you for purchasing the AUKEY OU-01 2 x 2 USB Wall Outlet 2-Pack. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

Two 2 x 2 USB Wall Outlets
Two Wall Plates
Four Wall Outlet Mounting Screws
Four Wall Plate Screws
User Manual
Warranty Card

Product Diagram

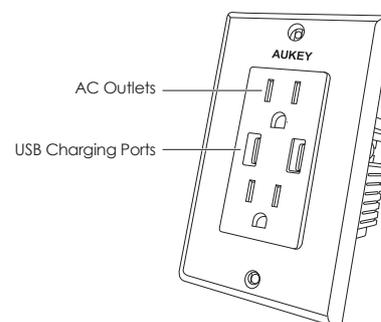

- EN -

Specifications

Model	OU-01
Input / Output	AC 125V 15A 60Hz
Max Power Output	1875W
USB Output	DC 5V 2.1A (4.2A Max)
Power Wires Requirement	10-14 AWG copper wires
Dimensions	1.16 x 0.70 x 0.457" / 4.57" x 2.76" x 1.77"
Weight	120g / 4.23oz

Installing the Outlet


Only install the OU-01 yourself if you feel confident to correctly and safely do so. Otherwise, seek the assistance of an experienced person or electrician.

1. **Turn off the power at the fuse box or circuit breaker before installing this outlet** (turning off the main switch is the safest option to ensure the correct circuit is off). Tape the circuit breaker off so that no one else turns it back on while you're working. You should not turn it back on until installation is complete (otherwise you might forget to turn off again before continuing installation)
2. Use a voltage tester to make sure there's no electricity in the outlet (or wires). Refer to your voltage tester's manual for detailed instructions on correct use and understanding results
3. If you're replacing an old outlet, unscrew it (it may have a faceplate that needs to be levered off first). Move it out from the wall, unscrew the screws that hold the connected wires, and remove the old outlet
4. Cut off the exposed (stripped) wire (including any loops) at the ends of the three wall power wires where they connect to the outlet. Use a wire stripping tool or that part of a combination tool to strip off about three quarters of an inch of the insulation from each wire without damaging the actual copper wire
5. Grip the bare wire with pliers and bend it to form a loop on each wire

- EN -

Model: OU-01

6. Loosen the three wire terminal screws on the back of the OU-01 using a screwdriver. Hook Hot, Neutral, and Ground wires around the corresponding screws, and then tighten the screws

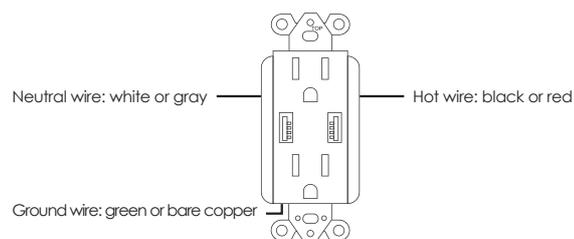

7. Carefully move the new outlet into the wall, with the attached wires loosely bunched behind. Secure the outlet through the slots immediately above and below the outlets with the two included mounting screws (the longer screws). Put the wall plate on the outlet, and secure the wall plate with the two included wall plate screws

Using the Outlet

1. Turn on the power at the fuse box or circuit breaker
2. Connect your electrical and electronic devices to this outlet for power
3. Unplug your devices when fully charged or not in use

- EN -

Product Care & Use

- If you don't feel confident to correctly and safely install this wall outlet, seek the assistance of an experienced person or electrician
- Switch off the circuit breaker and use a voltage tester to make sure the power is off before carrying out the installation or touching any bare wires
- Connect this outlet only to copper or copper-clad wires during installation. Don't connect to aluminum wires
- Don't cut into the copper wire when stripping off insulation as this may lead to wire over-heating and eventually fire
- Only use with a properly grounded wiring system
- Don't attempt to repair, wire, or rewire this product without proper certification and experience
- Unplug cables and devices from this wall outlet during thunderstorms

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@aukey.com

Amazon EU orders: support.eu@aukey.com

Amazon CA orders: support.ca@aukey.com

Amazon JP orders: support.jp@aukey.com

Amazon AU orders: support.au@aukey.com

*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.

- EN -

AUKEY International Ltd.
www.aukey.com | support@aukey.com
No.102, Building P09, Electronics Trade Center
Huanan City, Pinghu Town, Longgang District
Shenzhen, Guangdong, 518111, CN

